




KYROS

10 years Guarantee
2 years Electric and electronic components

INSTRUCTION MANUAL TOWEL RAILS

Mounting, installation, starting and operation

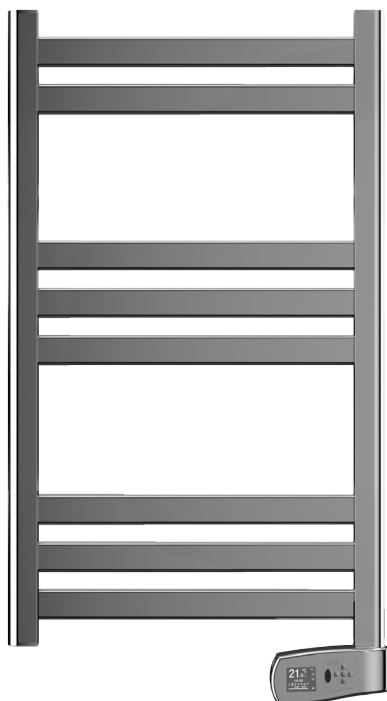

INFRARED CONTROL



Class II

KYROS



Thank you.

Thank you very much for choosing Rointe.

Before using the low consumption KYROS digital electric towel rail, we recommend you read this instruction manual thoroughly.

IMPORTANT:

This manual should be left with the product after installation.

CONTENTS






1. KYROS Towel Rail Information	4
1.1. Control Panel.....	4
1.2. Switching On and Off (stand-by)	6
1.3. Adjust the Day/Time	6
1.4. Temperature Selection.....	7
1.5. Locking the Keypad.....	8
1.6. Main Menu	9
1.6.1 Setting sub-menu	9
1.6.2 Energy sub-menu	11
1.6.3 Balance sub-menu	13
1.6.4 Program sub-menu.....	13
1.7. OPEN WINDOWS function.....	21
2. Mounting	22
3. Connecting	23
3.1. Technical Characteristics.....	24
3.2. Specific Regulations for Bathrooms.....	25
4. Maintenance & Cleaning	25
4.1. Safety Precautions.....	25
5. Guarantee	25

KYROS

1. KYROS Towel Rail Information

1.1. Control Panel


1.1.1. Keypad

ICON	INDICATION
	On / Off - Accept
	Decrease Temperature - Move left
	Increase Temperature - Move right
	Access/Back to Menu - Move up
	Manual/Automatic - Move down







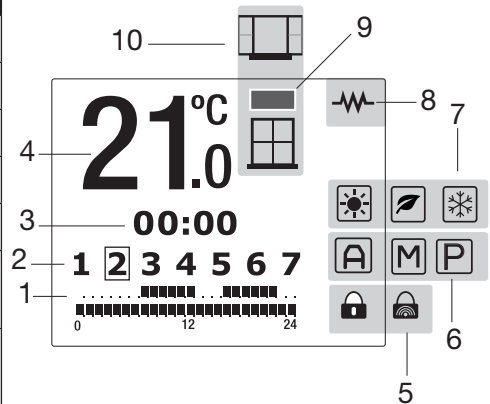












1.1.2. Display Panel

NO.	INDICATION
1	Programming
2	Days Of The Week
3	Time Of Day
4	Temperature Selected
5	Control Panel Locked / Unlocked indicator
6	MANUAL / AUTOMATIC / PILOT WIRE function indicator
7	COMFORT / ECO / ANTI-FROST mode indicator
8	Heating Element On indicator
9	Consumption indicator
10	OPEN WINDOWS function indicator














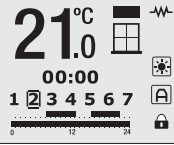





ICON	INDICATION
	OPEN WINDOWS function - active mode, no detection
	OPEN WINDOWS function - active mode, detected
	Energy Consumption indicator - green / yellow / red
	Heating Element on
	COMFORT mode on
	ECO mode on
	ANTI-FROST mode on
	AUTOMATIC function on
	MANUAL function on
	PILOT WIRE function on  Not available in UK. Only upon demand.
	AUTOMATIC function on when USER mode activated
	MANUAL function on when USER mode activated
	PILOT WIRE function on when USER mode activated  Not available in UK. Only upon demand.
	Control Panel locked through Keypad
	Control Panel locked through Remote Control

KYROS



1.2. Switching On and Off (stand-by)


<p>To switch the product ON, please press the  button once.</p> <p>The image to the right will appear on the display panel when the product is switched on.</p>	
<p>After 5 seconds the temperature, time and days of the week will be displayed on the display panel.</p>	
<p>To switch the product OFF, please press the  button again once.</p> <p>The product will go into stand-by mode with the word 'STAND-BY' displayed on the display panel.</p>	
<p>After 5 seconds the Rointe logo will appear.</p>	




1.3. Adjust the Day and Time

<p>To set the day and time, please press the  button on the keypad panel to access the Main Menu.</p> <p>Select the 'Settings' menu  icon using the  or  buttons on the keypad.</p> <p>To move left press the  button and to move right press the  button. Once the  icon is highlighted on the display panel, press  to access.</p>	
--	--



Now use the **-** and **+** buttons again to select the clock option  and press  to access.

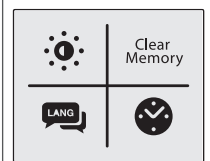


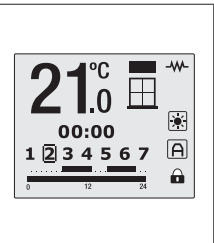
Use the buttons **-** and **+** to set the hour, then press  to confirm. Then use the **-** and **+** buttons to set the minutes and press  to confirm. Finally, use the **-** and **+** buttons to set the day (1 = Monday, 2 = Tuesday etc.) and confirm by pressing the  button.



1.4. Temperature Selection








To change the temperature, please press the **-** or the **+** button. To decrease the temperature press the **-** button and to increase the temperature press the **+** button.

When the room temperature is lower than the set temperature on the display panel, the product will come on with the  symbol appearing in the top right of the display panel.




1.5. Locking the Keypad



You can lock the keypad from the product or from your remote control* (optional).

<p>TO LOCK USING THE KEYPAD:</p> <p>To lock the keypad manually, please hold and press the  button AND the  button TOGETHER for 3 seconds.</p> <p>The  symbol will appear on the display panel and the keys will not respond.</p> <p>To unlock the keypad manually, please hold and press the  button AND the  button TOGETHER for 3 seconds.</p> <p>*To lock the keypad using your remote control, please see the corresponding instruction manual for your remote control separately.</p>	 <p>LOCKED</p>
<p>Please note that if you lock your product using your remote control then you can only unlock using your remote control. If your product is locked using your remote control and you press the control panel on your product then the following image will appear on the display panel.</p>	 <p>LOCKED</p>




1.6. Main Menu





The Main Menu of your product is accessed by pressing the menu  button.

You can navigate through the different options available on the menu by pressing the  and  buttons to move left and right respectively and to scroll through all 4 options.



The selected sub-menu will be highlighted with a frame, as shown in the image to the right on the 'Settings'  section of the display panel.




The below icons displayed on the screen take you to the following sub-menus:




			
Settings	Energy	Balance	Program





1.6.1. Main Menu: Settings sub-menu

The 'Settings' sub-menu configures the technical parameters of your product. To access, select the  icon displayed in the Main Menu screen and press  to confirm.

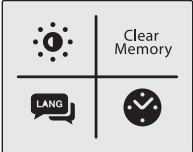



Use the  and  buttons to move across the different options on the sub-menu to choose your parameter and press .



The below icons displayed on the screen take you to the following parameters:




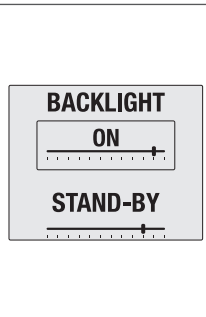
			
Display Panel brightness	Clear Memory	Language	Time

- **Adjust brightness of the Display Panel** 

This allows you to change the brightness of the display panel in both the STAND-BY and ON modes separately. To change the brightness ensure the  icon is highlighted and press the  button to access. Then with the buttons  and  you can switch between the two modes.



With the buttons  and  you can increase or decrease the brightness as you wish.

The cursor indicates the intensity of the light. Once you have set the required brightness press the  button to save and exit.




- **Clear the Memory** 



This allows you to clear any information saved in your product.

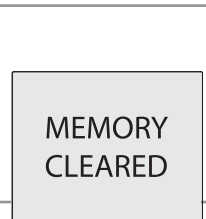


To clear the memory ensure the  icon is highlighted in the 'Settings' sub-menu and press the  button to confirm.


The display panel will show when completed and the language will change to default.



- **Change the Language** 

To set your chosen language, ensure the  icon is highlighted in the 'Settings' sub-menu and press the  button to access.

Use the  and  buttons to move up or down respectively until your chosen language is highlighted and confirm by pressing the  button.

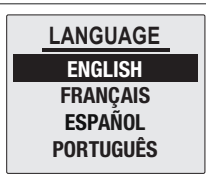






- **Adjust/Set the Time** 

This option sets the hour, minutes and day of the week in your product. Please refer to section 1.3. on page 6 of this manual.








1.6.2 Main Menu: Energy sub-menu

The 'Energy' sub-menu provides access to functions related to energy management. To access, select the  icon displayed in the Main Menu screen and press  to confirm.

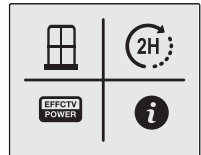

Use the  and  buttons to move across the different options on the sub-menu to choose your function and press  to confirm.




The below icons displayed on the screen take you to the following functions:



			
OPEN WINDOWS function	2 hour BOOST mode	Effective Power function	Information

- **OPEN WINDOWS Function** 

To set the OPEN WINDOWS* function, ensure the  icon is highlighted in the 'Energy' sub-menu and press the  button to confirm.

Use the  and  buttons to move up or down respectively until your preference is highlighted and confirm by pressing the  button.

*To learn more about how this function works, please go to point 1.7. on page 21 of this manual.






KYROS

• Two-hour Boost Mode

The two hour BOOST mode will override any other set mode and will boost your product to maximum power. You can choose to boost to maximum power for 15 minutes, 30 minutes, 1 hour or 2 hours.



To set the BOOST mode, ensure the  icon is highlighted in the 'Energy' sub-menu and press the  button to access.

Use the  and  buttons to choose how long to boost your product for and press  to confirm.

15 min	30 min
1H	2H

2H
MAX
POWER

• Effective Power Function

To check the Effective Power status of your product, ensure the  icon is highlighted in the 'Energy' sub-menu and press the  button to confirm.

The display panel will then show a status according to the current state of consumption of the product:

- Working Time
- Total Time

After 6 seconds, the display panel will then show:

- Nominal Power (w)
- Effective Power* (w)

*The effective power is the actual value of its nominal power that the product consumes during periods of operation.



WORKING TIME
000001h
TOTAL TIME
000001h

POWER(W)
2000
EFFECTIVE
POWER(W)
400





- Information** 

This function will display the software version, the date of this release and the rated power of the product.





To access this information, ensure the  icon is highlighted in the 'Energy' sub-menu and press the  button to confirm. The information will then show in the display panel.

SOFTWARE
VERSION
V1.00
19/02/2015
POWER 2400W

1.6.3 Main Menu: Balance sub-menu

The 'Balance' sub-menu/function returns the product to a constant temperature of 19°C. To activate this function, ensure the  icon is highlighted in the 'Balance' sub-menu and press the  button to confirm.

The product will return to the display panel in MANUAL function, with the temperature set to 19°C.


19°C  
10:50 
1 2 3 4 5 6 7 

1.6.4 Main Menu: Program sub-menu

This section, explains the operational aspects of your product in its various functions and modes.

What are the functions of MANUAL, AUTOMATIC and PILOT WIRE mode?




MANUAL	AUTOMATIC	PILOT WIRE
This function allows you to change the product between the COMFORT, ECO and ANTI-FROST modes and to change the temperature*.	This function will activate the programming that has previously been set in the product.	This function allows the product to be controlled by a central programmer.



 Not available in the UK.
Only on demand.




* To change temperature, please see point 1.4 on page 7 of this manual.

What are COMFORT, ECO and ANTI-FROST modes?


These modes are the different temperature ranges available within the product.


 COMFORT	 ECO	 ANTI-FROST
From 19°C to 30°C	From 7.5°C to 18.5°C	7°C

The 'Program' sub-menu provides access to functions related to programming the product. To access, select the  icon displayed in the Main Menu screen and press  to confirm.



Use the  and  buttons to move across the different options on the sub-menu to choose your program and press  to confirm.

The icons displayed on the following screen take you to the following functions:



MAN / AUTO		USER	PILOT
MANUAL/ AUTOMATIC functions	Programming options	USER function	PILOT WIRE mode

MAN	
USER	PILOT



• Manual/Automatic Function **MAN/AUTO**



To change or choose the MANUAL or AUTOMATIC function, ensure the **MAN/AUTO** icon is highlighted in the 'Program' sub-menu and press the  button to confirm. You can change from AUTOMATIC to MANUAL and vice versa by pressing the  button again.

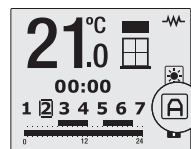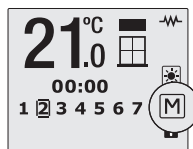The AUTOMATIC function activates the programming you have already established in the product.







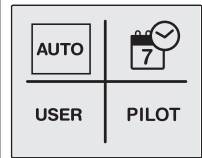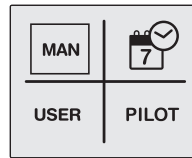



On the display panel, the symbol  will appear for the AUTOMATIC function and the symbol  for the MANUAL function.



• Programming options




To choose a program for your product you **MUST** be in AUTOMATIC mode. Please see previous page 14 for details on how to adjust to AUTOMATIC mode.

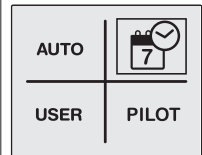To access the 'Programming' options, ensure you are in the 'Program' sub-menu, then select the icon  by using the  and  buttons and then press the  button once the  button is highlighted.




The display panel will show 2 options:

- PREPROGRAMS
- START PROGRAMMING






A flashing line will appear around the option that is selected. To change the option use the  and  buttons and press the  button.



• **START PROGRAMMING for AUTOMATIC mode**

To program the AUTOMATIC mode, see points above and ensure that START PROGRAMMING is highlighted. Press the  button to confirm and the display panel will show a flashing screen.




STEP 1 - Select COMFORT mode temperature


 COMFORT mode will be programmed first. Select the COMFORT mode temperature between 19°C and 30°C using the  and  buttons. The  icon and the temperature will flash. Press the  button to confirm.



KYROS





STEP 2 - Select ECO mode temperature

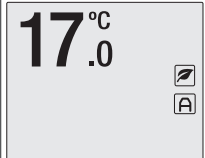 ECO mode will be programmed next. Select the ECO mode temperature between 7.5°C and 18.5°C. The  icon and the temperature will flash. Press the  button to confirm.






STEP 3 - Select the Days


The days of the week will start flashing on the display panel and show as DAY 1, DAY 2, DAY 3 etc.

Use the  and  buttons to move forwards or backwards through the days. Press  to select the day or days that you wish to include in your AUTOMATIC program. The day will stop flashing once selected. Repeat for all the days you wish to program and once all days are selected press the button  to move onto setting the hour.




STEP 4 - Select the Hours

Once step 3 has been completed, 0h appears on the display panel. 0h is equal to midnight. Use the  or  buttons to select the hour you wish to change. Use the  button to change the mode (COMFORT, ECO or nothing) for the hour you wish to modify. The corresponding icon for that mode will appear at the top of the screen.

To finish the programming press  or leave for 30 seconds without pressing any buttons. To change the programming go back to step 1 and proceed as described before.


*If you wish to have different days with different programming within your program you will need to modify each day separately, starting from the Main Menu again for each day/days. Follow Steps 1 to 4 above to program multiple differing days/hours/temperatures.

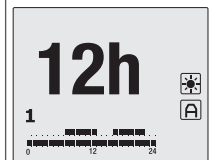




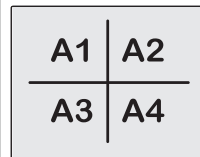


- PREPROGRAMS**

To CHOOSE a PREPROGRAM for your product:


Ensure that PREPROGRAM is highlighted in the `Program` sub-menu. Press the  button to confirm and the display panel will show 4 programs for you to choose from: A1, A2, A3 and A4.

Using the  and  buttons, choose the program you wish to activate and once highlighted, press the  button to confirm. You will then be automatically taken back to the main display panel and your preprogram option will show on the screen to confirm it is active.




To MODIFY any of the preset programs:

You need to be in AUTOMATIC mode and select the preprogram you want to modify i.e. your product must be working/have the preprogram already activated you wish to modify.


Then ensure that START PROGRAMMING is highlighted. Press the  button to confirm and the display panel will show a flashing screen. You then need to follow STEPS 1 - 4 on pages 15 & 16 to modify the temperature/day/hours.

*If you wish to have different days with different programming within your program you will need to modify each day separately, starting from the Main Menu again for each day/days. Follow Steps 1 to 4 above to program multiple differing days/hours/temperatures.

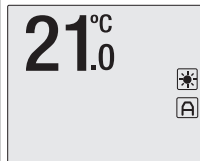








PRE-INSTALLED PROGRAMMES

		0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
A1	M-F																									
	Sa-Su																									
A2	M-F																									
	Sa-Su																									
A3	M-S																									
A4	M-F																									
	Sa-Su																									








KYROS

• USER Function USER



To enter the USER function, ensure **USER** icon is highlighted in the 'Program' sub-menu and press the  button to access. A 4 digit PIN code is required in order to access the menu. The default PIN is 0000. To enter the PIN use the  and  and  and  buttons to move left, right, up or down to select the correct numbers, pressing  after each number is highlighted to confirm. Once the full 4 digits have been entered, move to OK on the display panel and press the  button to confirm. Once the PIN number has been entered correctly, the main USER function sub-menu will be shown.

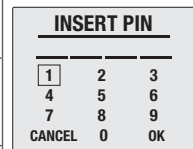



The below icons displayed on the screen take you to the following functions:




	 ****		
Enable/ Disable function	Change PIN	Upper temperature limit	Lower temperature limit





• Enable /Disable function

To access the Enable/Disable function, ensure the  icon is highlighted in the 'Program' sub-menu and press the  button to access.



Use the  and  buttons to move up and down respectively to select ON to enable or OFF to disable. Once the desired option is highlighted press the  button to confirm. Use the  button to go back to the main display panel or leave for 30 seconds without pressing any buttons.

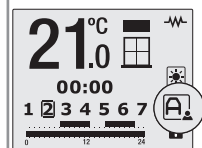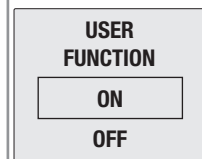




On the main screen you will see the  icon in automatic function, the  icon in Manual function and  when in Pilot Wire control function.






- Changing the PIN code**


To change the PIN code of your product, ensure the  icon is highlighted in the 'Program' sub-menu and press the  button to access.


Use the  and  and  and  buttons to move left, right, up or down to select the new numbers, pressing  after each number is highlighted to confirm.

Then move to OK on the display panel and press the  button to confirm. The screen will show PIN CHANGED.

Please remember your new PIN code for the future and store in a safe place. In order to access the USER function menu again you will need your new PIN code.



NEW PIN




1	2	3
4	5	6
7	8	9
CANCEL	0	OK




**PIN
CHANGED**

- Upper temperature**



To set the upper temperature limit of your product ensure the  icon is highlighted in the 'Program' sub-menu and press the  button to access.

Use the  and  buttons to decrease or increase your desired upper temperature between 19°C to 30°C and press the  button to confirm.

You will then return to the USER function screen. To exit press the  button to go back to the main display panel or leave for 30 seconds without pressing any buttons.

**UPPER
TEMPERATURE
LIMIT**



22.0°C





7

30


KYROS

- **Lower temperature**



To set the lower temperature limit of your product ensure the  icon is highlighted in the 'Program' sub-menu and press the  button to access.


Use the  and  buttons to decrease or increase your desired lower temperature between 7.5°C to 18.5°C and press the  button to confirm. You will then return to the USER function screen. To exit press the  button to go back to the main display panel or leave for 30 seconds without pressing any buttons.

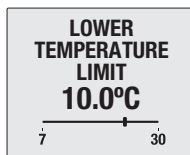





- **PILOT WIRE mode** PILOT



 Not available in UK. Only upon demand.

The PILOT WIRE wire mode allows your heating only to be controlled via a pilot wire programmer.

To access the PILOT WIRE mode, ensure the **PILOT** icon is highlighted in the 'Program' sub-menu and press the  button to access.



Use the  and  buttons to move up and down respectively to select ON to enable or OFF to disable. Once the desired option is highlighted press the  button to confirm. Use the  button to go back to the main display panel or leave for 30 seconds without pressing any buttons.

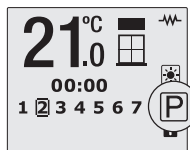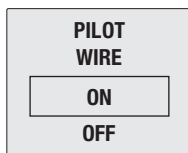


On the main display panel the symbol  will appear.





1.7. OPEN WINDOWS function

This function is activated when the temperature sensor detects a drop of 4°C from the set temperature within a 30 minute time period. The OPEN WINDOWS function will be active for 2 hours. If the  button is pushed during this period the product will switch off. Pushing the button  again will switch on the product without the OPEN WINDOWS function being switched on.


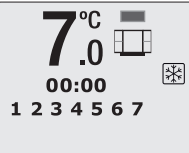
<p>When this function is activated by the sensor, the image to the right will appear on the product display panel for 5 seconds.</p>	
<p>When the OPEN WINDOWS function is activated, the product will move into ANTI-FROST mode at 7°C. The  icon will appear on the product display panel showing that the ANTI-FROST mode is active.</p>	

2. Mounting Instructions

Inside the box you will find a mounting kit.

1. Choose the right part of the wall.
2. Place the mounting stencil on the wall, marking the places for the holes.
3. Remove the stencil and make the holes in the wall.
4. Insert the rawl plugs in the holes made.
5. Screw the four metallic fasteners to the wall with the 6.3 x 50 mm screw.
6. Screw the four metallic cylinders to the product like in Figure 1.
7. Insert what you have assembled in Section 6 into the metallic fastener and fix well with the 2.9 x 9.5 mm stud bolt.

Figure 1

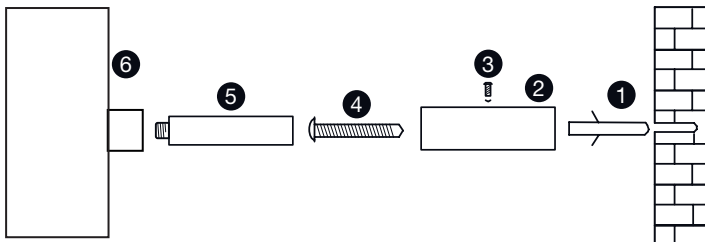

1	10 mm Rawl Plug
2	Metallic Fastener
3	Screw 2,9 x 9,5 mm
4	Screw 6,3 x 50 mm
5	Metallic Cylinder
6	Product



3. Connecting Instructions

Connection to the mains must be made observing the voltage stated on the product technical data label.


This product is designed to be permanently installed connected to fixed facilities. The product power supply circuit must have an all-pole circuit breaker switch with a separation of at least 3 mm between the contacts.

The product must be installed, if possible, away from any source of draughts (windows, doors) or any other thing which may affect its functioning. In this way, the temperature will not be affected. Place any object which might prevent the air flow (furniture, armchairs) 50 cm away from the front of the product.

The product must never be installed immediately below a power point.

The lower part of the control panel must be placed at least 15 cm from the floor.


For any product, if the power cable is damaged, it must be replaced by a specific cable. The replacement of the cable must be done by the maker, its after-sales service or qualified personnel. The technical specifications of your product appear on the technical data label.

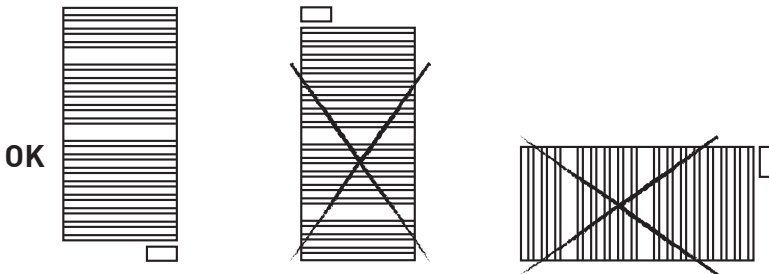


IMPORTANT

- This product must never be installed with its control panel at the top.
- This product must not be installed horizontally.
- During installation, use wedges so that the control panel will not be in contact with the floor.


3.1. KYROS Towel Rail Technical Characteristics

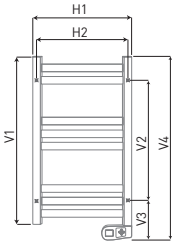


KT1030SE*3

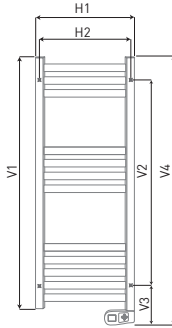

KT1050SE*3

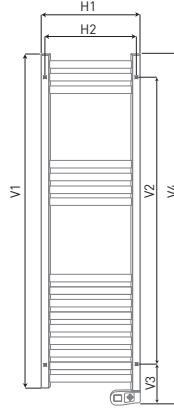

KT1075SE*3

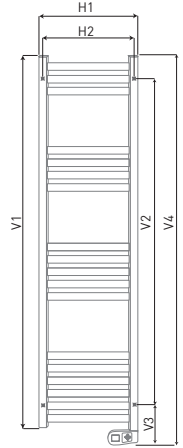

KT1100SE*3

CODE	H1	H2	V1	V2	V3	V4
KT1030SE**	500 mm	450 mm	800 mm	580 mm	200 mm	780 mm
KT1050SE**	500 mm	450 mm	1,200 mm	980 mm	200 mm	1,180 mm
KT1075SE**	500 mm	450 mm	1,600 mm	1,380 mm	200 mm	1,580 mm
KT1100SE**	500 mm	450 mm	1,800 mm	1,380 mm	200 mm	1,580 mm

CODE	MODEL	POWER	VOLTAGE	HEIGHT	WIDTH	DEPTH	INST.DEPTH	WEIGHT
KT1030SEB3	T.WHITE 030	300 W	230V~	800 mm	500 mm	50 mm	100 mm	11 kg
KT1050SEB3	T.WHITE 050	500 W	230V~	1,200 mm	500 mm	50 mm	100 mm	15 kg
KT1075SEB3	T.WHITE 075	750 W	230V~	1,600 mm	500 mm	50 mm	100 mm	22 kg
KT1100SEB3	T.WHITE 100	1,000 W	230V~	1,800 mm	500 mm	50 mm	100 mm	28 kg


CODE	MODEL	POWER	VOLTAGE	HEIGHT	WIDTH	DEPTH	INST.DEPTH	WEIGHT
KT1030SEM3	T.METALLIC 030	300 W	230V~	800 mm	500 mm	50 mm	100 mm	11 kg
KT1050SEM3	T.METALLIC 050	500 W	230V~	1,200 mm	500 mm	50 mm	100 mm	15 kg
KT1075SEM3	T.METALLIC 075	750 W	230V~	1,600 mm	500 mm	50 mm	100 mm	22 kg
KT1100SEM3	T.METALLIC 100	1,000 W	230V~	1,800 mm	500 mm	50 mm	100 mm	28 kg

CODE	MODEL	POWER	VOLTAGE	HEIGHT	WIDTH	DEPTH	INST.DEPTH	WEIGHT
KT1030SEC3	T.CHROME 030	300 W	230V~	800 mm	500 mm	50 mm	100 mm	11 kg
KT1050SEC3	T.CHROME 050	300 W	230V~	1,200 mm	500 mm	50 mm	100 mm	15 kg
KT1075SEC3	T.CHROME 075	500 W	230V~	1,600 mm	500 mm	50 mm	100 mm	22 kg
KT1100SEC3	T.CHROME 100	750 W	230V~	1,800 mm	500 mm	50 mm	100 mm	28 kg



3.2. Specific Regulations for Bathrooms

This product is in compliance with CLASS II safety regulations (double insulation). It can be installed in areas 2 and 3, position A and B whenever it observes the following regulations

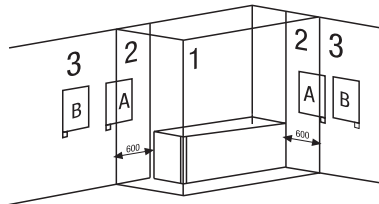

- In bathrooms, the product must never be installed in such a way that the switches and other control products may be touched by someone in the bathtub or having a shower.
- In a kitchen or bathroom, the body of the product shall be placed at least 25 cm from the floor.
- It must not be earthed.

4. Maintenance & Cleaning

Thanks to the high standard of its materials and surface treatment, your product is protected against corrosion. Do not use any abrasive product on the product. Clean the product with a damp cloth and a pH neutral soap, and the control panel with a dry cloth.

4.1. Safety


This product can be used by children aged from 8 years and above and persons with reduced physical sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved. Children should not play with the product. Cleaning and user maintenance should not be carried out by children without supervision. Children must be supervised at all times to ensure that they do not play with the product.

5. Guarantee

In this section, we hereby describe the guarantee conditions, which the buyer acquires, on buying this product from ROINTE. These conditions comply with all the rights construed in the national legislation in force, as well as any additional rights and guarantees, which are offered by ROINTE.

5.1. Any incident that you might detect in your ROINTE product can be sorted by the product seller or quickly by the manufacturer. Please **contact ROINTE by telephoning 0203 321 5929 for Technical Support**. Alternatively, you can **email ROINTE at support@rointe.co.uk**, through which we will instruct you on how to solve the incident.

You will need to state the product reference (located on the label indicating product features), serial number, proof of purchase and the type of incident at hand when contacting us so that we can check the guarantee. In addition, please attach a copy of the product invoice.

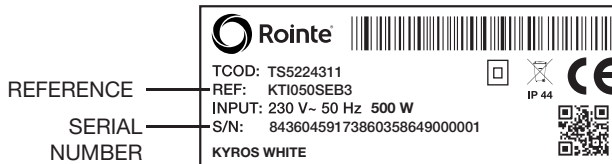

5.2. ROINTE guarantees that there are no material defects of design or manufacture at the time of original acquisition and guarantees the aluminium for a period of 120 months and any electronic and electrical components for 24 months.

5.3. If during the guarantee period, the product does not work correctly under normal use, and any design, material or manufacturing defect is found, ROINTE will repair or substitute the product as it may see fit, in accordance with the terms and conditions as follows:

5.3.1. The guarantee is only applicable if the original guarantee is issued by the seller and when the said guarantee is filled in correctly including product reference, series number (marked on the product's label indicating technical features), purchase date and the seller's stamp.

ROINTE reserves the right to reject the guarantee service when this information has been removed or modified after the original product purchase.

5.3.2. The guarantee only applies to those cases that concern material, design and manufacturing defects, and under no circumstances covers damage to the product for the following reasons:

5.3.2.1. Incorrect use of the product, i.e. used for other purposes that are not construed as its normal use or for not respecting the instructions of use and maintenance given by ROINTE as well as incorrect installation or use of the product that may not comply with the current technical standards of safety.

5.3.2.2. Corrosion caused by direct exposure to salt water is excluded from the



guarantee. When the product is installed no more than 200m from the coast the guarantee for damages caused by corrosion the period will be reduced by 50%.

5.3.2.3. Any unauthorized repairs carried out by unauthorized technicians or opening of the product by unauthorized people.

5.3.2.4. Any accidents that are deemed outside the control of ROINTE, such as lightning, fires, floods, natural disasters, public disorders, etc.

5.3.3. Any repairs or substitutions that are included in this guarantee do not allow any additions or new periods of guarantee.

5.3.4. Any repairs or substitutions covered under this guarantee must be parts that are functionally equivalent. The defective parts or parts removed or replaced shall become the property of ROINTE.

5.4. The Technical Service department of ROINTE will advise you if you need to buy any parts not covered under the guarantee or out of guarantee.

5.5. This guarantee does not affect the buyer's legal rights stipulated in the current national legislation, nor affects those rights against the distributor or installer that could come forth in compliance with the purchase contract.

5.6. In the absence of a national legal legislation applicable, this guarantee shall prevail and may be construed as the buyer's only protection. ROINTE, its offices, distributors and installers may not be held responsible for any accidental damage that emerges due to infringement of any rules implicitly related to this product.

European Directive 2012/19/UE

Under the European Directive 2012/19/UE on waste electrical and electronic equipment (WEEE), the product cannot be disposed in the usual council bins and containers. They must be separated to optimize the recovery and recycling of all of the components and materials and reducing the impact to human health and the environment. The symbol of the container crossed out over a horizontal line is marked on all of ROINTE's products to remind the consumer of the obligation to separate them on disposal.

The consumer should contact the local authority or original point of sale to learn more about the correct disposal of this product.



Cut along the dotted line

CERTIFICATE OF GUARANTEE



In the event of detecting any defect in the product within the period of guarantee, you must fill in the following Guarantee Certificate and send it to us stamped together with a copy of the sales invoice via email support@rointe.co.uk or to the following postal address: INDUSTRIAS ROYAL TERMIC, S.L., C/E, Parcela 43, 30140 Santomera (Murcia, Spain).

CERTIFICATE OF GUARANTEE	
REFERENCE:	N° SERIES:
USER:	
HOME ADDRESS:	
TOWN:	POSTCODE:
PROVINCE:	COUNTRY:
TELEPHONE:	SELLER'S STAMP:
EMAIL:	PURCHASE DATE:

NB: This certificate of Guarantee must be filled in fully in order to obtain guarantee rights. The date of purchase and seller's stamp are compulsory. Please, attach a copy of your sales invoices. In addition, for new constructions include the Certificate of First Occupation.

KYROS



We hope you enjoy your product!

Thank you for choosing Rointe.



ROINTE UK

Catalyst House
720 Centennial Court, Centennial Park
Elstree, Herts, WD6 3SY

T. 0203 921 5928

F. 0208 953 5861

Technical Support

T. 0203 321 5929

support@rointe.co.uk

www.rointe.co.uk