

TABLE 1	1.3 kW System	
Rated Voltage (V)	115	230
Rated Current (A)	11.3	5.7
Fuse/Circuit Breaker Rating (A)	16	10

TABLE 2	Indoors	Outdoors
Heated Zone	9m <sup>2</sup>	6m <sup>2</sup>
<i>This area heated figure is based on a mounting height of 2.3 - 2.5m</i>		

RATED POWER	PART NO.	ELEMENTS	FRAME
1.3 kW (2 x 650 W)	IRXL2-1300B	Two black glazed ceramic elements	Black powder coated extruded aluminium

### INSTALLATION AND OPERATING INSTRUCTIONS


The low operating cost, large heat area and high reliability of the Herschel Aspect XL2 is why the world's hotels, restaurants and public places are turning to the Herschel Aspect as the system of choice for reliable, cost effective and fail safe comfort both indoors and outdoors. It is now increasingly being used by discerning domestic customers to heat their patios, conservatories and terraces too.

The Herschel Aspect XL2 consists of 2 highly emissive ceramic heating elements mounted in a directional, reflective grill-protected unit. It is designed to gently warm people both indoors and in an outdoor covered area using infrared heat.

Infrared heat is a 100% natural radiating heat that humans readily absorb, producing a feeling of great comfort and well-being. Infrared heat produced from the Herschel Aspect warms you directly without heating the air in between: meaning the heat goes where you want it to. No wonder customers immediately warm to Herschel Aspect. The system is easy to install; extremely discreet, produces no red glow and requires next to no maintenance.

The heater will directly warm people and objects within the Heated Zone (note: air movement may reduce area coverage). Within enclosed areas the thermal mass of the building will also be heated. This will increase the ambient temperature and dependent upon the property age/type and insulation, may increase the effective heated zone by up to 100%. For larger commercial projects or where different mounting heights are required we would always recommend Herschel carry out a survey or detailed desktop assessment.

### DIAGRAM 1

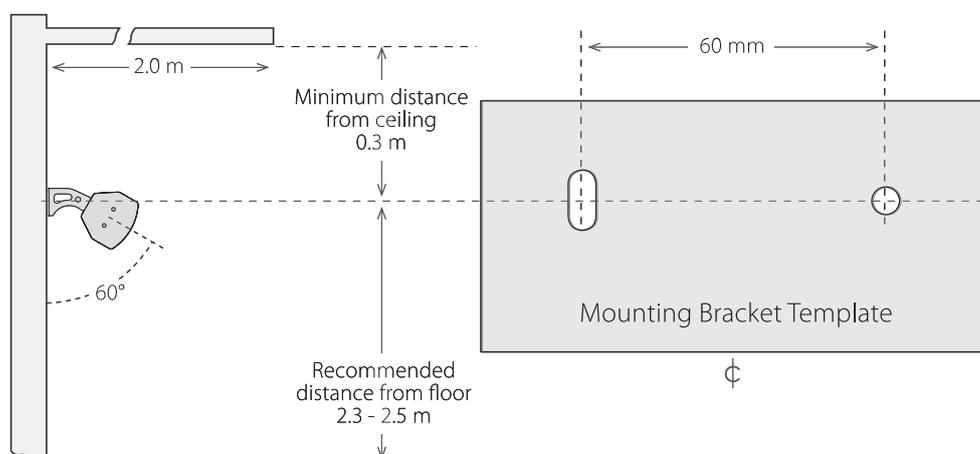

### IMPORTANT

In areas with air movement/wind the directional Far Infrared spread may reduce by 1/3 to 1/2. In these areas we recommend mounting at the lowest height and proportionally increasing the number of heaters.

The Herschel Aspect XL2 rises to very high temperatures in use and the unit (in particular the heater elements) must not be touched when power is applied.

Do not touch the unit when it is on. After switch off the elements remain hot for a considerable time and the unit should not be touched for a minimum of 30 minutes.

NEVER use the heater to ignite materials.

### HERSCHEL XL2

powered by ceramicx




2 Ceramicx CHE Ceramic Elements

Heater Size 550 x 95 x 138 mm

Aluminised steel reflectors

Heating Up Time < 5 Minutes

Useful Wavelength Range 2 - 10 μm

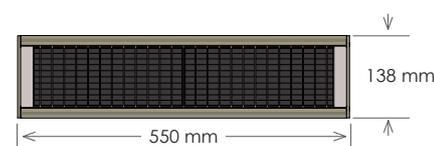



#### IMPORTANT INFORMATION

Please read the following information fully, as safe and reliable operation depends on correct installation. Please keep this instruction sheet for future reference.

The AC mains supply is dangerous and potentially lethal. Ensure the mains supply is switched off at the consumer unit (fuse box) before attempting any work on electrical circuits. Wiring to this unit must be connected in accordance with the relevant national electrical safety standards. This unit must only be installed by a competent and qualified electrician. This appliance must be earthed.

#### ELECTRICAL INFORMATION

The electrical supply to the unit should be provided by connecting to a circuit, which is protected by a fuse or miniature circuit breaker suitable for the electrical rating of the unit and in accordance with Table 1 or Table 2.

The supply to the Herschel Aspect XL must be separately switched. Alternatively a switched fused spur taken from a ring main can be used. The spur fuse should also be rated in accordance with the appropriate table. In either case the switch used to operate the Herschel Aspect XL must be indoors and readily accessible.

The cable used to connect to the existing wiring should be correctly rated solid core wiring cable. Please note that the use of flexible appliance cable with stranded conductors for permanent wiring (except for the final connection between a cable outlet and the fixed equipment) is prohibited by IEE wiring regulations. Where applicable, these regulations preclude the use of a 13A plug and socket for powering the Herschel Aspect XL.

For the final connection to the Herschel Aspect XL, only the flexible cable and cable entry supplied with the unit must be used. The cable must connect to the supply in a suitable enclosure or cable outlet designed for that purpose. The cable outlet current carrying capacity must be greater than the recommended fuse current rating given in Table 1.

If the cable outlet is outdoors it must be of waterproof construction. If the flexible cable is taken through an outside wall for connection purposes, suitable conduit or mechanical protection must be used through the wall to protect the cable from mechanical damage within the wall. The mounting position of the unit must ensure that any mechanical damage to the flexible cable is unlikely. If physical damage to the cable is possible, suitable conduit protection must be provided.

#### MOUNTING POSITION ( see Diagram 1 )

The Herschel Aspect XL must be located in a position to allow for proper and efficient use but one that ensures hot parts are not touched accidentally.

The recommended height for the mounting is 2.3m to 2.5m (90°-98°) from ground level, with the heaters angled down at 60 degrees (see diagram 1). The Herschel Aspect XL MUST NOT be installed at a height of less than 2.3m (90°). Consideration should be given to any temporary or occasional additions such as stages or

platforms, and the height should be adjusted accordingly. The Herschel Aspect XL should be firmly and permanently attached to the wall.

#### EXTERIOR USE

The unit is protected against water ingress (protection level IPX4), however it is recommended that the unit is installed in a covered outdoor area to give maximum protection and longevity against the effects of driving rain, wind, frost, salt and water contaminations, etc.

The canopy/roof/cover must be of a permanent nature, there must be a minimum clearance of 0.3m (12") between the cover and any part of the Herschel Aspect XL and the cover must extend a minimum of 2m (79") from the wall. The Herschel Aspect XL must not be attached to or installed close to any combustible material (eg, wood or PVC cladding, fascia or soffit).

#### GUARANTEE

The Herschel Aspect XL is guaranteed against failure due to faulty materials or workmanship for five years from date of purchase. In the unlikely event of failure of the unit within this time, the unit must be returned to the supplier for repair or replacement. The Herschel Aspect XL contains no customer-maintainable parts.

The guarantee is invalid if the correct installation instructions as given in this datasheet have not been adhered to.

#### MAINTENANCE

The Herschel Aspect XL is maintenance free but to maintain appearance it should occasionally be cleaned all over with a soft dry cloth. No abrasive cloths or cleaners should be used and appliances such as pressure washers, steam cleaners, etc, should never be used.

Cleaning should only be done when the unit is cold and switched off. All personnel cleaning and maintaining the unit must have suitable training and information to carry out the operation safely.

#### IMPORTANT NOTICE TO PURCHASER

Before utilizing the product, the user should determine the suitability of the product for its intended use. HERSCHEL INFRARED LTD expressly disclaims the implied warranties and conditions of merchantability and fitness or a particular purpose. In no case shall HERSCHEL INFRARED LTD be liable under any legal theory, including but not limited to contract or strict liability, for any direct, indirect special, incidental or consequential damages resulting from product use.

Check that the mains supply is switched off, and then provide the mains supply connection to the Herschel Aspect XL2 using the specifications supplied earlier.

The BROWN wire is to be connected to LIVE ('L'), the BLUE wire to NEUTRAL ('N') and the GREEN/YELLOW wire to EARTH ('E'). Any exposed flexible cable is to hang DOWN (not tied up) and must have adequate clearance from the heater to prevent scorching or damaging the cable.



distributed by: